

REPLACING RUBBER TAP WASHER



SIMPLE INSTRUCTION



STEP 1

- Close off mains water supply.
- Unscrew tap handle from tap.
- Dismantle interior components of tap.

Dismantle with 22m spanner or wrench.



STEP 2

- Remove brass spindle from tap.

Use pointed pliers or thick needle.



STEP 3

- At the end of the spindle there is a brass seating on which a rubber washer is fitted. When the rubber washer is flattened the tap will start leaking and the rubber washer must be replaced. To prevent flattening the rubber washer, do not use excess force when closing the tap. You can now reassemble the tap.



Use appropriate tools for installation and prevent damage.

GARANTIE UND HAFTUNG

Garantie und Haftung werden in unseren Allgemeinen Geschäftsbedingungen festgelegt. Ein durch Spannungskorrosion entstandener Schaden unterliegt nicht der Produkthaftung.